


SLIDING DOOR SYSTEMS: ASSEMBLY INSTRUCTIONS


SQUARE HANDLE

6th edition Bremen, July 2006

ACCESSORIES:

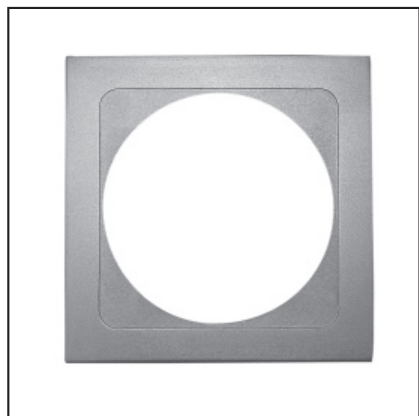

1_

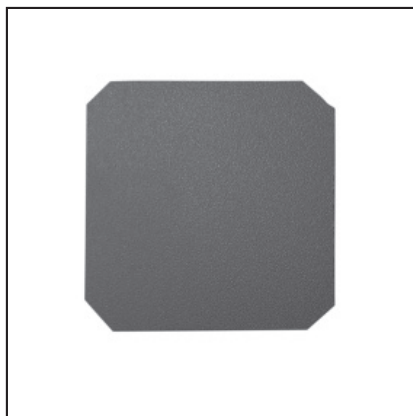




2_

1_Square handle 80 x 80 mm (12.02.091)_affix to the panel.

2_Coloured inlay piece for the handle_not included.

3_Double-sided tape to affix the handle_Included.

ASSEMBLY INSTRUCTIONS

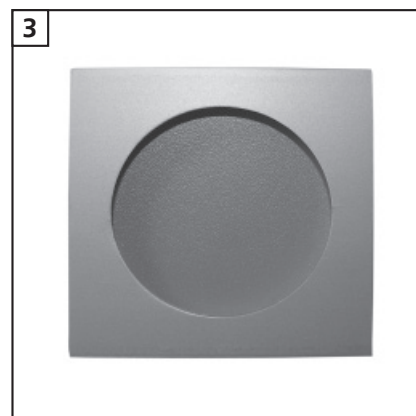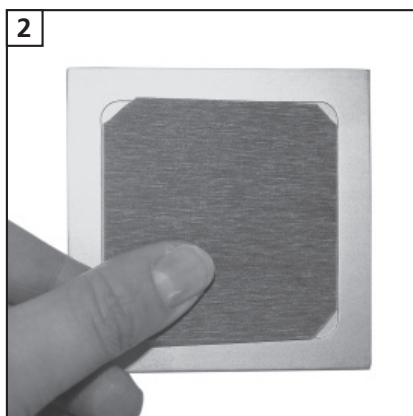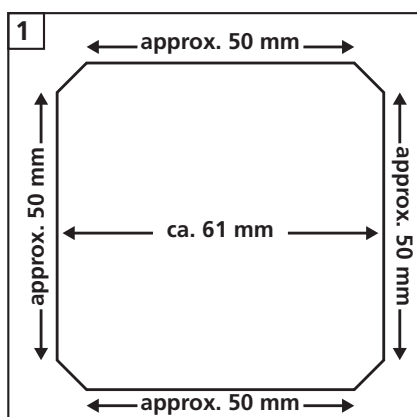

1_Cut the inlay piece to size (approx. 61 x 61 mm) so that it is an exact fit (see sketch 1). The corners must be trimmed off a bit. **Important:** The material cannot be thicker than 1 mm; you may use, for example, laminated plastic.

2_Insert the inlay piece face down into the recess on the back side of the handle. Adhere the double-sided tape (80 x 80 mm) to the back of the handle and the laminate.

3_Pull off the protective foil and place the handle on the position, which has been **dry, cleaned, free of grease and is free of oil, separating agent, impurities**. Then press it on using your hand.

Manufacturing easy medium difficult*

raumplus

*Base for the degree of difficulty is a standard sliding door without slant. This is to be classified as ,easy' in respect to production and installation.